

# Calibration Strobes

Strobes are used to calibrate your gramophone or phonograph. Select the strobe to suit your electricity supply frequency:

## 50Hz Strobe for Gramophone Turntable

## 60Hz Strobe for Gramophone Turntable



## 50Hz Strobe for Phonograph Mandrel

## 60Hz Strobe for Phonograph Mandrel



## INSTRUCTIONS

Cut round outer diameter of Strobe, cutting or punching out centre spindle hole. Place the Strobe on your Gramophone turntable and view under artificial light; adjust the speed control until the bands in the ring appear stationary. Your turntable is now rotating at the speed you selected.